

## MODE OPERATOIRE INSTALLATION ACCESSOIRE D'IMMOBILISATION DES BAIES FACTICES

Au choix : Par collage ou coincement entre les dalles de faux plancher



Figure 5



Figure 6

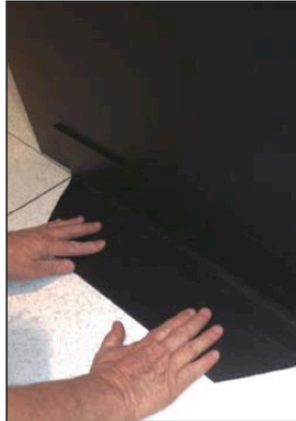


Figure 7

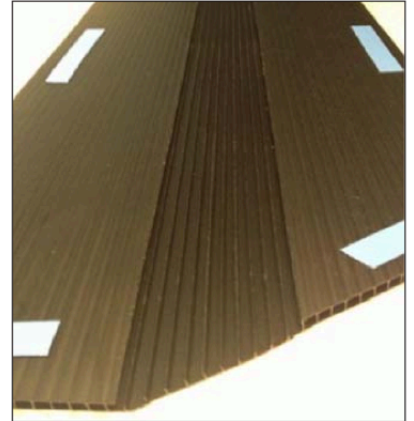


Figure 8

For added stability a foot accessory can be easily fitted to the base of the structure.

Firstly wipe all surfaces that the foot will stick to with an alcohol wipe, on the wall and data centre floor. Remove the adhesive tape backing (Fig 5).

Stick to the base of the structure making sure the right angle been in the foot is in line with where the base of the Eziwall meets the Data centre floor (Fig 6). Hold in place for 60 seconds and don't put excess loads on the joint for 2 hours.

The Eziwall can be secured to the data center floor by sticking the foot to the floor.

Use a alcohol wipe to clean the floor surface. Remove the adhesive stripe backings and stick to the floor making sure there is a nice right angle in the foot (Fig 7). Hold down with some pressure for at least 60 secs. Full strength in the joint will take 24 hours.

If you are unable to stick to the floor the clever routed (Fig 8) area on the back of the foot allows you to use the data centre's raised floor structure to secure the Eziwall.

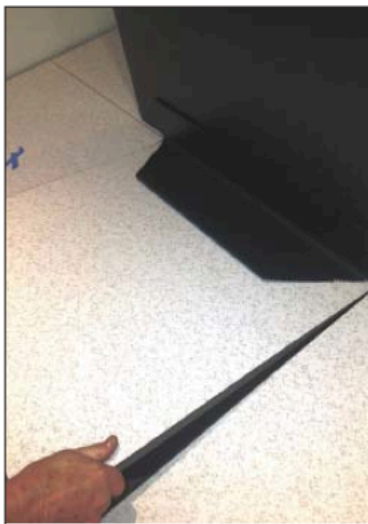


Figure 9

Simply position the Eziwall along the tile line, remove the tile (Fig 9).



Figure 10

Let the horizontal section of the foot fall under the floor line (Fig 10).



Figure 11

Replace the tile and press home (Fig 11).

**The foot will now be secure under the floor jammed between the floor stinger support and the tiles.**